


REMOVAL

1. **REMOVE LUGGAGE COMPARTMENT DOOR TRIM**
 - (a) Remove the 2 screws and luggage compartment door assist grip.
 - (b) Remove the 15 clips and luggage compartment door trim.

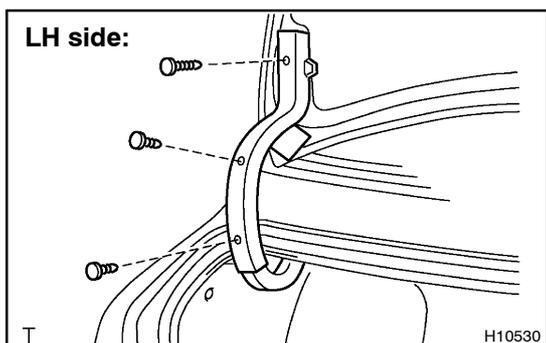


2. **REMOVE LUGGAGE COMPARTMENT DOOR HINGE COVERS**
 - (a) Remove the 3 clips.
 - (b) Open the cover and remove the hinge cover.
 - (c) Employ the same manner described above to the other side.

3. REMOVE LUGGAGE COMPARTMENT DOOR

- (a) Disconnect the connector.
- (b) Disengage the clamps.
- (c) Remove the 4 bolts and door.

Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)

4. REMOVE LUGGAGE COMPARTMENT TRIM NO.2 COVER

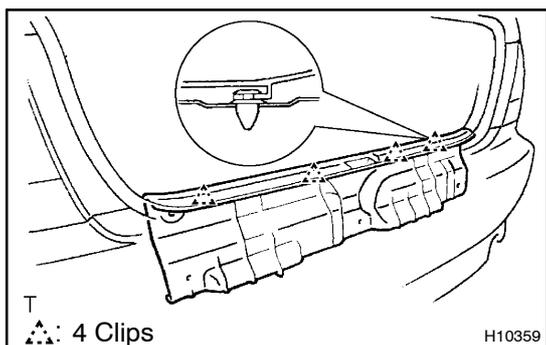


5. REMOVE LUGGAGE COMPARTMENT TRIM REAR COVER

- (a) Using a clip remover, remove the 5 clips.
- (b) Using a screwdriver, remove the luggage compartment trim rear cover.

HINT:


Tape the screwdriver tip before use.

6. REMOVE LUGGAGE COMPARTMENT FLOOR HOOKS

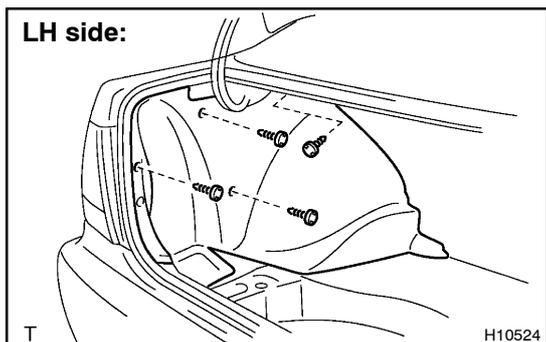


7. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER LH AND RH


- (a) Remove the 4 clips and luggage compartment trim side cover.
- (b) Employ the same manner described above to the other side.

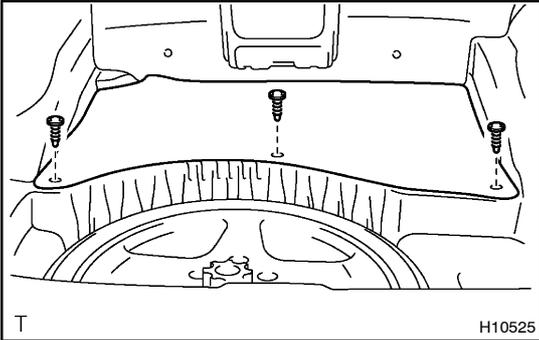**8. REMOVE LUGGAGE COMPARTMENT FLOOR MAT**


Remove the 3 clips and luggage compartment floor mat.

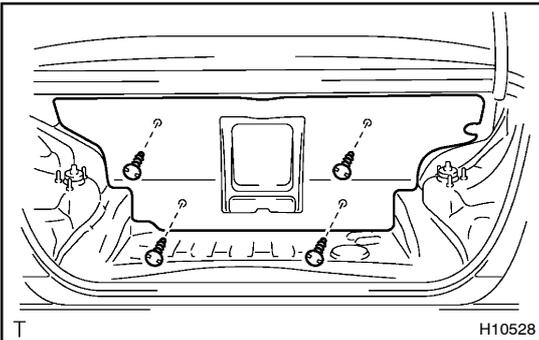**9. REMOVE LUGGAGE COMPARTMENT TRIM FRONT COVER**


Remove the 4 clips and luggage compartment trim front cover.

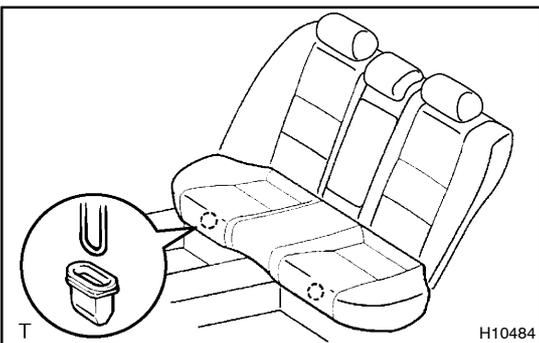**10. REMOVE REAR SEAT CUSHION**

Pull up the front portion of the seat cushion, then remove it.

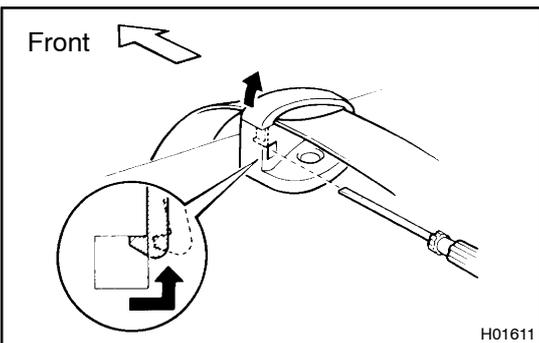**11. REMOVE REAR SEATBACK**

- (a) Using a screwdriver, remove the rear seat belt from the belt guide as shown in the illustration.
- (b) Employ the same manner described above to the other side.

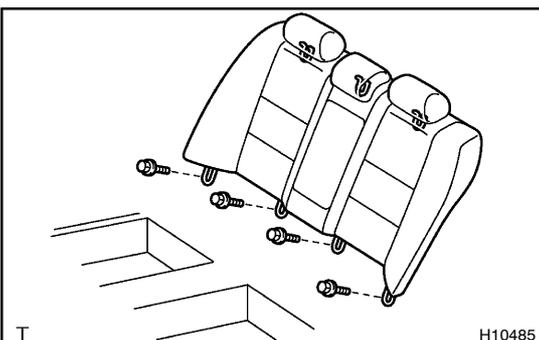


- (c) Remove the 4 bolts.

Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)


- (d) Pull up the seatback to remove it.

NOTICE:


Be careful not to damage the body.

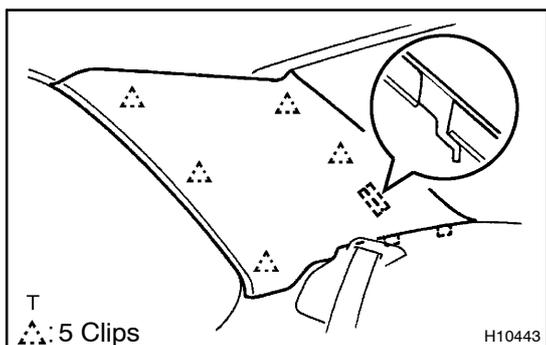**12. REMOVE ROOF SIDE INNER GARNISH**

- (a) Using a screwdriver, remove the roof side inner garnish.
- (b) Employ the same manner described above to the other side.

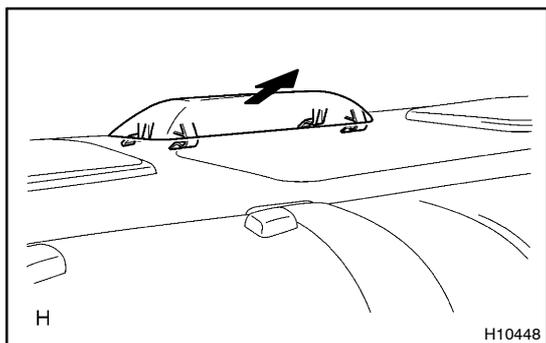**13. REMOVE HIGH-MOUNTED STOP LIGHT**


- (a) Remove the high-mounted stop light as shown in the illustration.
- (b) Disconnect the connector.

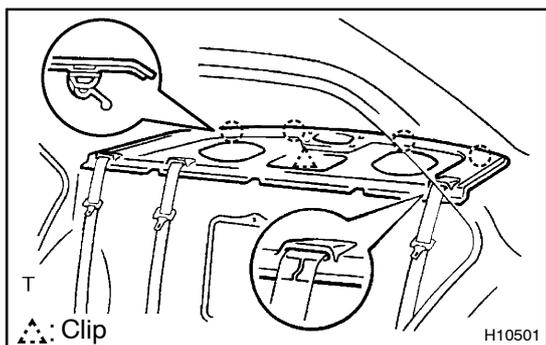**14. REMOVE PACKAGE TRAY TRIM PANEL**


- (a) Pull the package tray trim panel upward to disengage the clips.
- (b) Remove the rear seat outer belts through the cutout on the package tray trim.
- (c) Pull the package tray trim panel forward to remove it.

15. REMOVE ROOM PARTITION TRIM PAD


Remove the 2 clips and room partition trim pad.

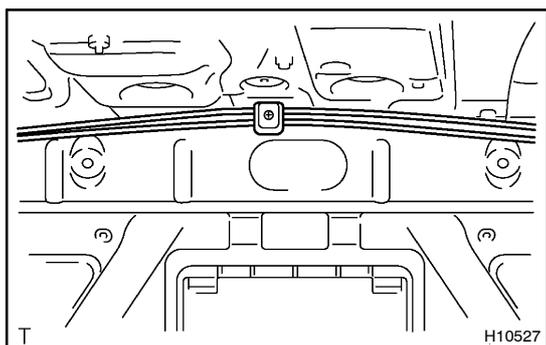**16. REMOVE TORSION BAR**


- (a) Remove the torsion bars from the center bracket.

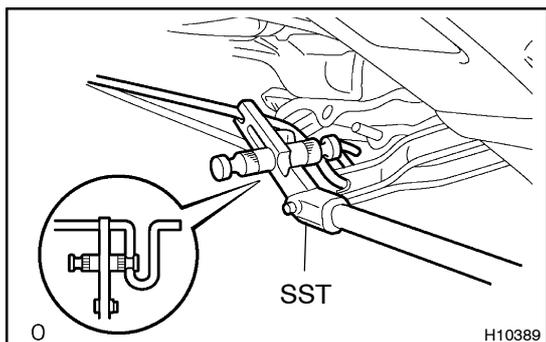

- (b) Install SST to the torsion bar on the hinge side.
SST 09804-24010

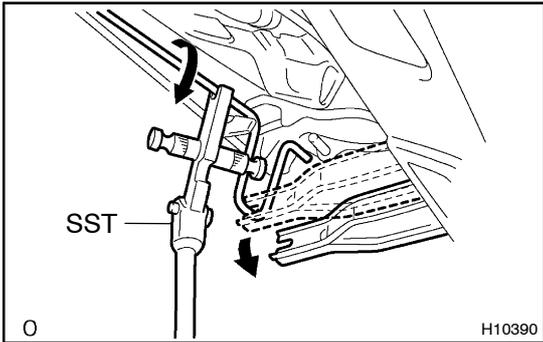

- (c) Push down on SST, and pull the luggage compartment door hinge from the torsion bar.
- (d) Slowly lift SST, and remove the torsion bar from the torsion bar bracket with SST.

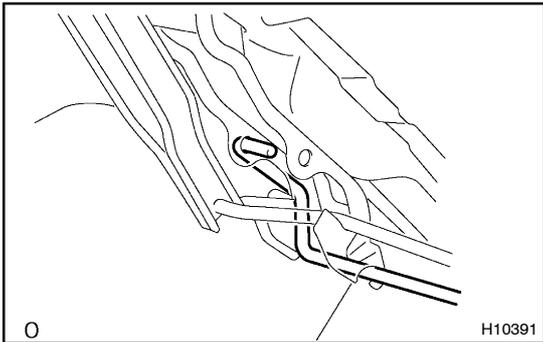


- (e) Disconnect the torsion bar from the bracket.
- (f) Employ the same manner described above to the other side.

HINT:

Check the color of marks on the torsion bar when replacing or installing the torsion bar.

Side	Color
RH	Yellow
LH	Pink

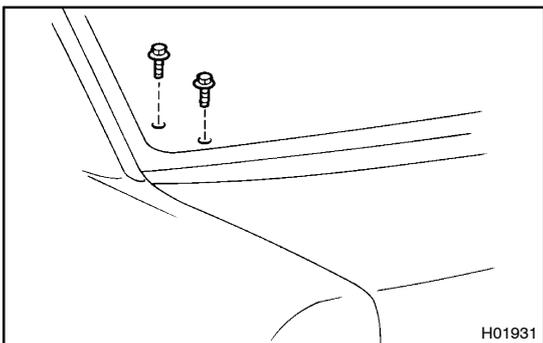

17. REMOVE LUGGAGE COMPARTMENT DOOR HINGE

- (a) Remove the 2 bolts.
- (b) Remove the hinge.
Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)
- (c) Employ the same manner described above to the other side.