



REMOVAL

1. REMOVE HEADLIGHT

HINT:

Follow the same procedure for RH as for LH.

- (a) Remove a part of LH front fender liner.
- (b) Remove a part of front bumper cover.
- (c) Remove the bolt, 2 nuts and 2 clips.
- (d) Lift up the front bumper and pull the headlight assembly towards the front of the vehicle, and disconnect the engagement of the headlight assembly.
- (e) Install LH headlight assembly.
- (f) Install a part of front bumper cover.
- (g) Install a part of front fender liner.
- (h) Inspect and adjust optical axis of headlight (See page [BE-38](#)).

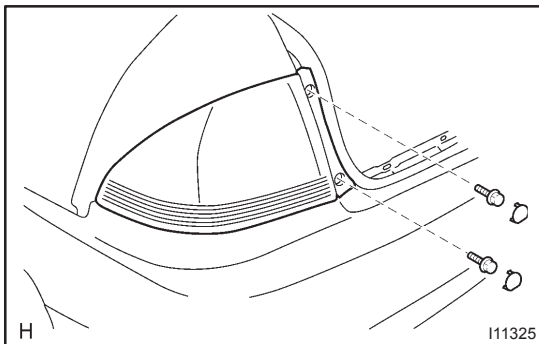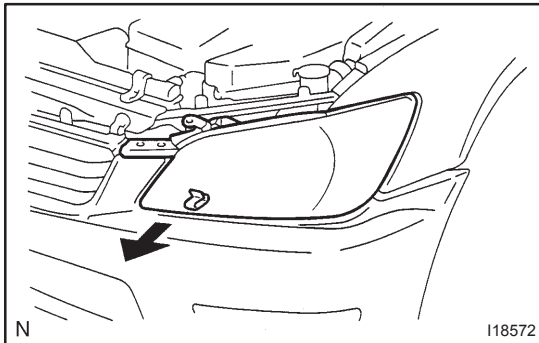

2. Sedan:

REMOVE REAR COMBINATION LIGHT

HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
 - Follow the same procedure for RH as for LH.
- (a) Remove luggage compartment trim side cover No. 2.
 - (b) Remove luggage compartment trim rear cover.
 - (c) Remove a part of LH luggage compartment trim side cover.
 - (d) Remove the 2 rear light covers and 2 bolts.
 - (e) Pull the pin toward the rear of the vehicle, and disconnect the engagement of 2 pins.
 - (f) From the inside of the luggage room, separate the connector and disconnect the LH rear combination light assembly.

