

***BASIC OPERATION***

---

**QUICK REFERENCE**

Driver's seat ..... 2

Steering wheel ..... 3

Automatic transmission ..... 4


Headlight and turn signal switch ..... 5

Wiper switch ..... 6






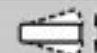 









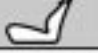 
**BASIC OPERATION – QUICK REFERENCE**

**1. DRIVER’S SEAT**

**Power Type**




Seat adjustment













	Seat position		
	Seat cushion angle		
			
	Seatback angle		
	Head restraint height		
	Head restraint angle		

SVBA011

**Manual Type**



Seat adjustment

	Seat position	
	Seatback angle	
	Seat cushion height	
	Seat cushion angle	
	Head restraint height	
	Head restraint angle	

SVBA012

## **2. STEERING WHEEL**

### **• TILT STEERING WHEEL**



To tilt the steering wheel up or down to the desired angle:

1. Pull the lever backward while holding the steering wheel.
2. Up or down the steering wheel to the desired angle.
3. Release the lever.

### 3. AUTOMATIC TRANSMISSION



#### SELECTOR LEVER POSITION

**P:** Parking, engine starting and key removal position

**R:** Reverse position

**N:** Neutral position

**D:** Normal driving position (Shifting into overdrive possible)


**M:** Position for manual shifting up or downshifting (Shifting into overdrive not possible)\*

**3, 2:** Position for more powerful engine braking

**L:** Position for maximum engine braking

\*:When the cruise control is being used, even if you downshift from "D" to "M", engine braking will not be enabled because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 182.

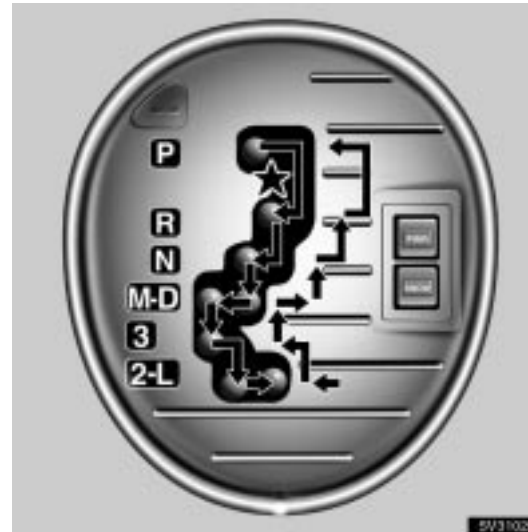


#### OPERATION OF SELECTOR LEVER



★ Shift while pressing the brake pedal. (Ignition switch must be in the "ON" position.)




## 4. HEADLIGHT AND TURN SIGNAL SWITCH

### • HEADLIGHT SWITCH With the ignition OFF



	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on.
	Automatic light control

SSBA0106

### With the engine started and parking brake released


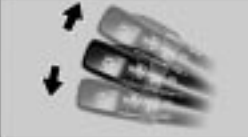
	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on at full intensity.
	Automatic light control

SSBA0106

	High beam
	Headlight flasher

SSBA0110

### • TURN SIGNAL SWITCH






	Right or left turn
	Lane change (Right or left)

SSBA0120

## BASIC OPERATION – QUICK REFERENCE

---

### 5. WIPER SWITCH

	Mist wiper operation
	Intermittent operation
	Low speed operation
	High speed operation
	Washer on

© 2013 GM Corp.