

## **SECTION 1 – 4**

---

### **INSTRUMENTS AND CONTROLS**

#### **Interior equipment**

Vanity mirrors .....	48
Interior lights .....	49
Personal lights .....	49
Ignition switch light .....	50
Clock .....	50
Outside temperature display .....	51
Cigarette lighter and ashtray .....	52
Power outlet .....	53
Glove box .....	53
Garage door opener .....	54
Cup holders .....	57
Warning reflector holder .....	58
Tie-down hooks .....	59
Floor mat .....	59
First-aid kit holder .....	60
Luggage stowage precautions .....	61

## INTERIOR EQUIPMENT

---

 
### VANITY MIRRORS



To use the vanity mirrors, swing the sun visor down and open the cover.


The vanity light comes on when you open the cover.

### Sun visors

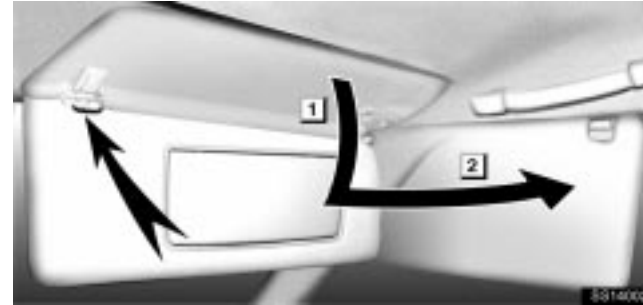

- 1** To block out glare from the front , swing the sun visor down.
- 2** To block out glare from the side, remove the sun visor from the hook and swing it to the side.

## INTERIOR LIGHTS

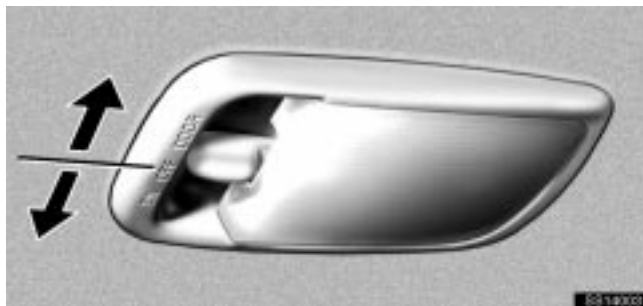 

**To turn on the interior light, slide the switch.**

With the switch in the "DOOR" position, the light comes on when any of the doors are opened. After all the doors are closed, the light remains on for about 15 seconds and then goes out.

 
However, in the following cases, the light goes out immediately:

1. All the doors are closed when the ignition key is in "ACC" or "ON" position.
2. The ignition key is turned to "ACC" or "ON" when the light is still on.
3. All the doors are locked when the light is still on.
4. One door is closed with the lock button pushed in while the other doors are locked.

## PERSONAL LIGHTS



► **With moon roof**

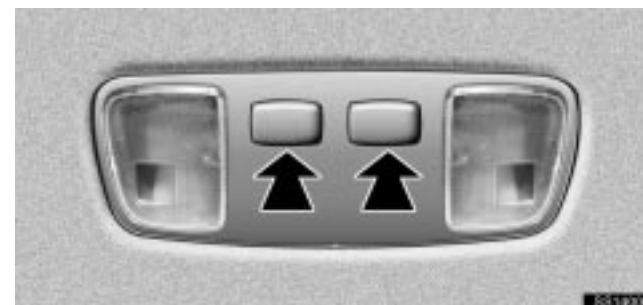

► **Without moon roof**

**To turn on the personal light, push the switch. To turn it off, push the switch again.**

## INTERIOR EQUIPMENT

---

### IGNITION SWITCH LIGHT



**For easy access to the ignition switch, the ignition switch light comes on when any of the doors are opened.**

The light remains on for about 15 seconds and goes out after all the doors are closed. However, the light goes out immediately when all the doors are locked or the ignition key is in the "ACC" or "ON" position.

### CLOCK



**The digital clock indicates the time with the ignition key at the "ACC" or "ON" position. To reset the hour, press the "H" button. To reset the minutes, press the "M" button. To adjust the time to the nearest hour, press the ":00" button.**

For example, if the ":00" button is pressed when the time is between 9:30 – 9:59 or between 10:01 – 10:29, the time will change to 10:00.

If the electrical power source has been disconnected from the clock, the time display will automatically be set to 1:00 (one o'clock).

When the headlight switch is in the first or second click stop, you can also adjust the brightness of the display using the instrument panel light control dial.

## OUTSIDE TEMPERATURE DISPLAY



► Vehicles sold in U.S.A.



► Vehicles sold in Canada

This display shows the outside temperature when the ignition switch is on.

The displayed temperature ranges from  $-30^{\circ}\text{C}$  ( $-22^{\circ}\text{F}$ ) up to  $50^{\circ}\text{C}$  ( $122^{\circ}\text{F}$ ). The display flashes for 10 seconds when the outside temperature goes down below  $3^{\circ}\text{C}$  ( $37^{\circ}\text{F}$ ) or less and informs you that the outside temperature is low. The warning is repeated whenever the temperature rises to at least  $+5^{\circ}\text{C}$  ( $+41^{\circ}\text{F}$ ) and then sinks again to  $+3^{\circ}\text{C}$  ( $37^{\circ}\text{F}$ ). If the temperature does not appear on the display or it shows "--", take your vehicle to your Lexus dealer.



### CAUTION

The outside air temperature indicator is designed to inform you when the air temperature is near freezing. This indicator does not detect the presence of ice on the road. Drivers must exercise great caution in driving on roads which are wet, slippery or icy.

## INTERIOR EQUIPMENT

### CIGARETTE LIGHTER AND ASHTRAY



► *Cigarette lighter and front ashtray*



► *Rear ashtray*

#### Cigarette Lighter

To use the cigarette lighter, press it in. After it finishes heating up, it automatically pops out ready for use.

Do not hold the cigarette lighter pressed in.

If the engine is not running, the ignition key must be in the "ACC" position to use the lighter.

Use a Lexus genuine cigarette lighter or equivalent for replacement.

#### Ashtray

To use the ashtray, open the cover.

 
When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, close the ashtray cover completely.

To remove the ashtray, open the ashtray cover and pull it out.

#### CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always completely close the ashtray after use.

## POWER OUTLET

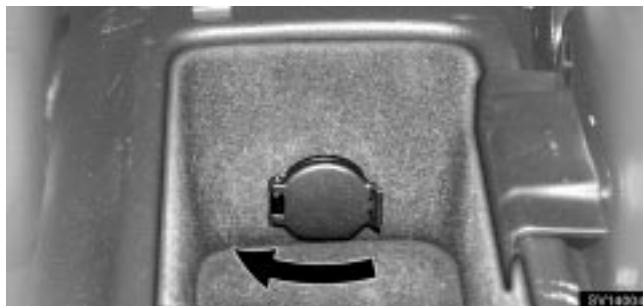


The power outlet is designed for power supply for car accessories.

The ignition key must be in the "ACC" or "ON" position for the power outlet to be used.

### NOTICE

 - To prevent the fuse from being blown, do not use the electricity over the total vehicle capacity of 12V 3.5A.
- To prevent the battery from being discharged, do not use the power outlet longer than necessary when the engine is not running.
- Close the power outlet lid when the power outlet is not in use. Inserting a foreign object other than the appropriate plug that fits the outlet, or allowing any liquid into the outlet may cause electrical failure or short circuits.

## GLOVE BOX

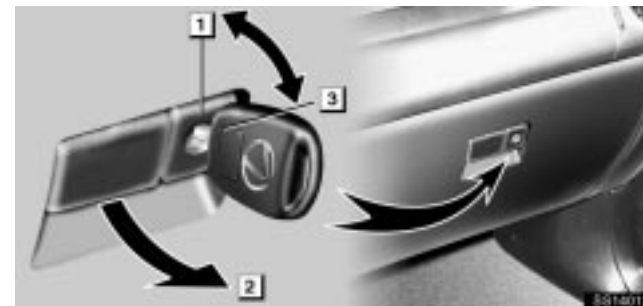

► 1 Unlock 2 Open 3 Lock

To open the glove box door, pull the lever. To lock the glove box door, insert the master key and turn it clockwise.

With the tail lights on, the glove box light will come on when the glove box door is open.



### CAUTION

 
To reduce the chance of injury in case of an accident or a sudden stop, always keep the glove box door closed while driving.

## INTERIOR EQUIPMENT

### GARAGE DOOR OPENER

The garage door opener (**HomeLink® Universal Transceiver**) is manufactured under license from HomeLink® and can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, and security systems, etc.

#### (a) Programming the HomeLink®

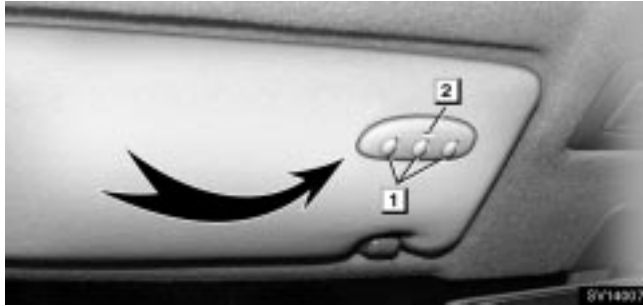

► **1 Buttons** **2 Indicator light**

The HomeLink® in your vehicle has 3 buttons and you can store one program for each button.

To ensure correct programming into the HomeLink®, install a new battery in the hand-held transmitter prior to programming.

The battery side of the hand-held transmitter must be pointed away from the HomeLink® during the programming process.

For Canadian users, follow the procedure in “Programming an entrance gate/Programming all devices in the Canadian market”.

1. Decide which of 3 HomeLink® buttons you want to program.
2. Place your hand-held garage transmitter 25 to 75 mm (1 to 3 in.) away from the surface of the HomeLink®.

Keep the indicator light on the HomeLink® in view while programming.

3. Simultaneously press and hold the hand-held garage transmitter button along with the selected HomeLink® button.

4. When the indicator light on the HomeLink® changes from a slow to a rapid flash after 20 seconds, you can release both buttons.

5. Test the operation of the HomeLink® by pressing the newly programmed button. If programming a garage door opener, check to see if the garage door opens and closes.

If the garage door does not operate, identify if your garage transmitter is of the “Rolling Code” type. Press and hold the programmed HomeLink® button. The garage door has the rolling code feature if the indicator light (on the HomeLink®) flashes rapidly and then remains lit after 2 seconds. If your garage transmitter is the “Rolling Code” type, proceed to the heading “Programming a rolling code system”.

6. Repeat steps 2 through 5 for each remaining HomeLink® button to program another device.



### **Programming a rolling code system**

If your device is “Rolling Code” equipped, it is necessary to follow steps 1 through 4 under the heading “Programming the HomeLink®” before proceeding with the steps listed below.

1. Locate the “training” button on the ceiling mounted garage door opener motor. The exact location and color of the button may vary by brand of garage door opener. Refer to the owner’s guide supplied by the garage door opener manufacturer for the location of this “training” button.

2. Press the “training” button on the ceiling mounted garage door opener motor.

Following this step, you have 30 seconds in which to initiate step 3 below.

3. Press and release the vehicle’s programmed HomeLink® button twice. The garage door may open. If the door does open, the programming process is complete. If the door does not open, press and release the button a third time. This third press and release will complete the programming process by opening the garage door.

The ceiling mounted garage door opener motor should now recognize the HomeLink® unit and be able to activate the garage door up/down.

4. Repeat steps 1 through 3 for each remaining HomeLink® button to program another rolling code system.

### **Programming an entrance gate / Programming all devices in the Canadian market**

1. Decide which of the 3 HomeLink® buttons you want to program.

2. Place your hand– held gate/device transmitter 25 to 75 mm (1 to 3 in.) away from the surface of the HomeLink®.

Keep the indicator light on the HomeLink® in view while programming.

3. Press and hold the selected HomeLink® button.

4. Continuously press and release (cycle) the hand– held gate/device transmitter button every two seconds until step 5 is complete.

5. When the indicator light on the HomeLink® changes from a slow to a rapid flash after 20 seconds, you can release both buttons.

6. Test the operation of the HomeLink® by pressing the newly programmed button. Check to see if the gate/device operates correctly.

7. Repeat steps 1 through 6 for each remaining HomeLink® button to program another device.

### **Programming other devices**

To program other devices such as home security systems, home door locks or lighting, contact your authorized Lexus dealer for assistance.

## INTERIOR EQUIPMENT

---

### Reprogramming a button

Individual HomeLink<sup>®</sup> buttons cannot be erased, however, to reprogram a single button, follow the procedure “Programming the HomeLink<sup>®</sup>”.

#### (b) Operating the HomeLink<sup>®</sup>

To operate the HomeLink<sup>®</sup>, press the appropriate HomeLink<sup>®</sup> button to activate the programmed device. The HomeLink<sup>®</sup> indicator light should come on. The HomeLink<sup>®</sup> continues to send the signal for up to 20 seconds as long as the button is pressed.

#### (c) Erasing the entire HomeLink<sup>®</sup> memory (all three programs)

To erase all previously programmed codes at one time, press and hold down the 2 outside buttons for 20 seconds until the indicator light flashes.

If you sell your vehicle, be sure to erase the programs stored in the HomeLink<sup>®</sup> memory.


### CAUTION

- When programming the HomeLink<sup>®</sup> Universal Transceiver, you may be operating a garage door or other device. Make sure people and objects are out of the way of the garage door or other device to prevent potential harm or damage.
- Do not use this HomeLink<sup>®</sup> Universal Transceiver with any garage door opener that lacks the safety stop and reverse feature as required by federal safety standards. (This includes any garage door opener model manufactured before April 1, 1982.) A garage door opener which cannot detect an object (signaling the door to stop and reverse), does not meet current federal safety standards. Using a garage door opener without these features increases risk of serious injury or death.

FCC ID: CB2V94800  
CANADA: 1763 102 264

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation. **WARNING: This transmitter has been tested and complies with FCC and DOC/MDC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.**
 
## CUP HOLDERS

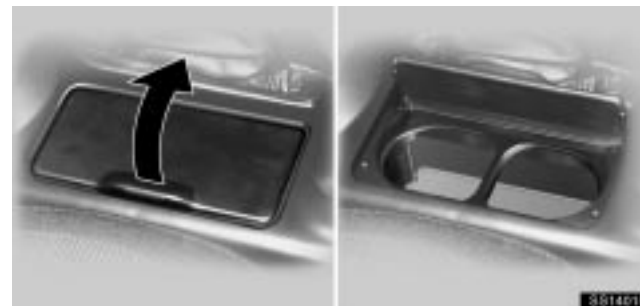


### ► Front

**To use the cup holder, open the cup holder lid.**

You can use it as an accessory box by removing the holder inside.
 
## INTERIOR EQUIPMENT

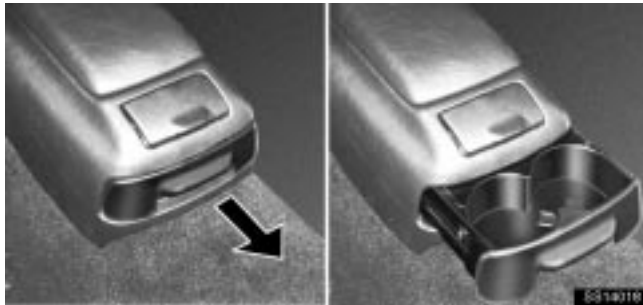

### ► Rear

To use the cup holder, push the cup holder portion of the center console box.

The cup holder is designed for holding cups or drink-cans securely in its holes.



### CAUTION

- Do not place anything else other than cups or drink-cans in the cup holder, as such items may be thrown about in the compartment and possibly injure people in the vehicle during sudden braking or in an accident.
- Rear only: To reduce the chance of injury in case of an accident or sudden stop while driving, keep the cup holder closed when not in use.

## WARNING REFLECTOR HOLDER



### ► 1 To loosen 2 To tighten

**This belt is designed to hold the warning reflector.**

 
**To loosen:** Pull the buckle forward.

**To tighten:** Pull on the belt.

Although the warning reflector itself is not included as an original equipment, this belt can be used to store the warning reflector.

Make sure the warning reflector is securely held.

## TIE-DOWN HOOKS

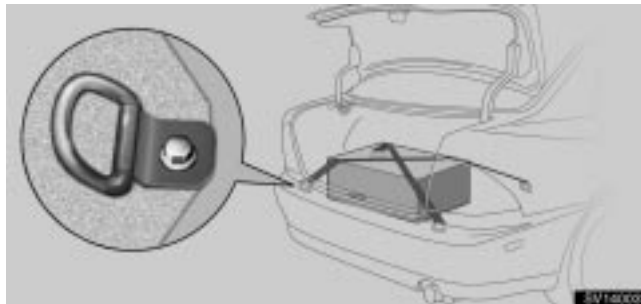


**To secure your luggage, use the tie-down hooks as shown above.**

See "Luggage stowage precautions" on page 61 for precautions to observe for loading luggage.

### CAUTION

**To avoid personal injury, keep the tie-down hooks stored under the carpet when not in use.**
 
## FLOOR MAT

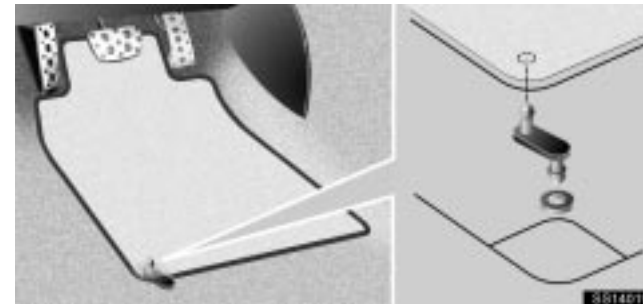

**Use a floor mat of the correct size.**

If the floor carpet and floor mat have a hole, then it is designed for use with a locking clip. Fix the floor mat with locking clip into the hole in the floor carpet.

 
## INTERIOR EQUIPMENT



### CAUTION

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.

## FIRST-AID KIT HOLDER

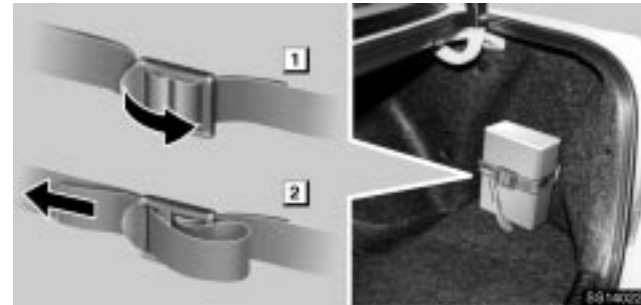

► **1 To loosen** **2 To tighten**

This belt is designed to hold the first-aid kit.

**To loosen:** Pull the buckle forward.

**To tighten:** Pull on the belt.

Make sure the first-aid kit is securely held.

## LUGGAGE STOWAGE PRECAUTIONS

When stowing luggage or cargo in the vehicle, observe the following:

- Put luggage or cargo in the trunk when at all possible. Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.
- For better fuel economy, do not carry unnecessary weight.

### CAUTION

- Do not place anything on the package tray behind the rear seatback. Such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- Do not drive with objects left on top of the instrument panel. They may interfere with the driver's field of view. Or they may move during sharp vehicle acceleration or turning, and impair the driver's control of the vehicle. In an accident they may injure the vehicle occupants.

### NOTICE

*Do not load the vehicle beyond the vehicle capacity weight specified on the tire pressure label.*

