

SECTION *III*

MORE ADVANCED FUNCTIONS

Convenient features

Setup ..... 88

Map color ..... 89

Automatic rerouting ..... 89

Time to destination ..... 90

Adjust time zone ..... 91

Distance ..... 92

Notify seasonal restrict ..... 93

Voice guide in all modes ..... 94

Current street name ..... 94

Maintenance information ..... 95


Calendar ..... 100




## Setup

You can set the values shown on the "Setup" screen.

1. Select the **"MENU"** button on the navigation controller.

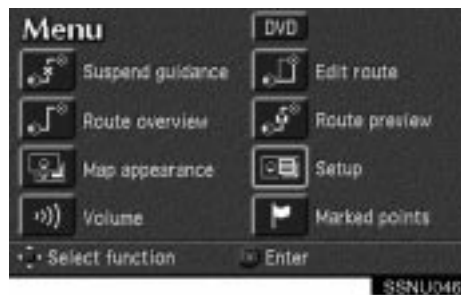

2. Select the **"Setup"** switch to display the "Setup" menu screen. Select your desired items you want to set. Selected items will be highlighted in green.

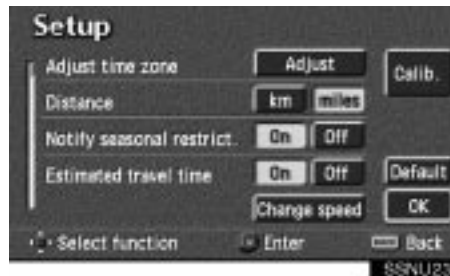

3. Select the **"OK"** switch on the screen and then the previous screen will be displayed.

**"Default"**: Select the **"Default"** switch on the right side of the screen. All of the settings can be defaulted.

**"Map color" (day or night)**: You can select your desired map color.

**"Auto reroute"**: You can set the system will or will not automatically search for a new route to the destination.

**"Estimated travel time"**: You can set to display the time required to reach the destination on the route guidance screen.

**"Adjust time zone"**: You can select your desired time zone.

**"Distance"**: You can change "km" or "miles" to display your desired units.

**"Notify seasonal restrict"**: You can select to notify or not to notify a seasonal restrict.

**"Voice guide in all modes"**: You can set the voice guide in all modes or not.

**"Current street name"**: You can select to show or not to show a current street name on the map screen.


**"Operation guide on map"**: Display or non-display of the operation guide on the display can be selected.

# Map Color

1. Push the "MENU" button on the navigation controller.



2. Select the "Setup" switch.

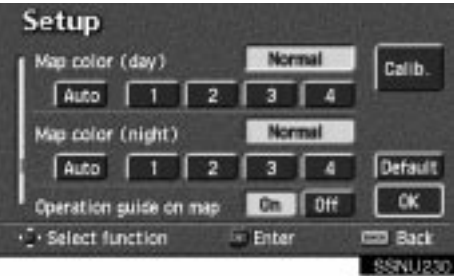

3. Select your desired day and/or night map color and then select the "OK" switch to return the map screen. See "The map color list" on this page for details.

Select the "Normal" switch to default the map color.

Select the "Auto" switch to select the map color automatically.

When you select the "Auto" switch, the map color is changed in every three month.

## The map color list


Switch NO.	The map color	Schedule
1	Green	Mar.–May
2	Blue	Jun.–Aug.
3	Gray	Sep.–Nov.
4	Beige	Dec.–Feb.

# Automatic Rerouting

When the "Automatic rerouting" feature is turned on, the system will automatically search for a new route to the destination if you leave the guidance route. This feature does not operate while you are driving on roads where the guidance is not available.

To turn the "Auto reroute" mode on:

1. Push the "MENU" button on the navigation controller.

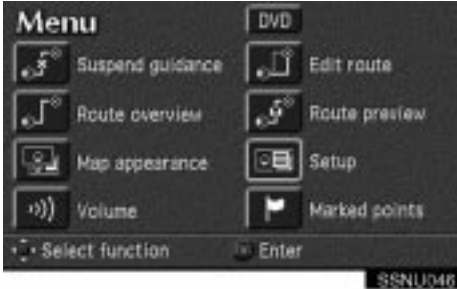

2. Select the "Setup" switch.

## III

## Automatic Rerouting



3. Select the "On" switch of "Auto reroute".


Selected switch is highlighted in green.

### INFORMATION

*If your vehicle leaves the guidance route, the system searches for a new route to the destination. The new route may or may not take you back to the previous route depending on how far you are off the original guidance route.*

## Time to Destination

When the "Time to destination" feature is turned on, the time preferred to reach the destination is displayed on the route guidance screen.

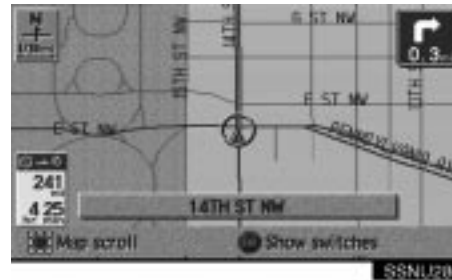


To turn the "Estimated travel time" mode "On":

1. Push the "MENU" button on the navigation controller.




2. Select the "Setup" switch.

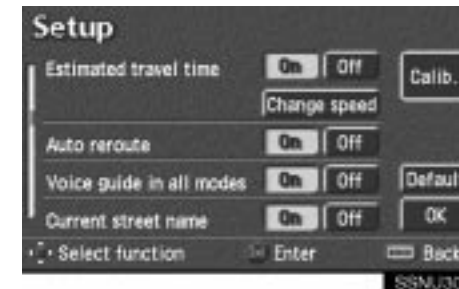

3. Select the "Change speed" switch on the "Setup" screen.

## Time to Destination

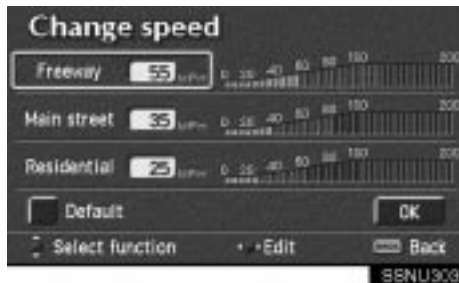

4. You can set the speed as your desire by operating the select and scroll lever of the navigation controller. Select the item by moving the lever vertically, and move the lever horizontally to set the speed.

If you select the **"Default"** switch, the default speed is set at each item.

5. After you finish setting the desired speeds, select the **"OK"** switch on the right side of the screen.

6. The **"Setup"** screen will be displayed. Select the **"On"** switch of **"Estimated travel time"**.

Selected switch is highlighted in green.

### INFORMATION


- The displayed time to the destination is the approximate driving time calculated based on the speeds you selected and your actual position along the guidance route.
- The time shown may vary greatly depending on your progress along the route (which may be affected by road conditions such as traffic jams, construction work, etc.).
- Up to 99 hours 59 minutes can be displayed.

## Adjust Time Zone

1. Push the **"MENU"** button on the navigation controller.



2. Select the **"Setup"** switch.

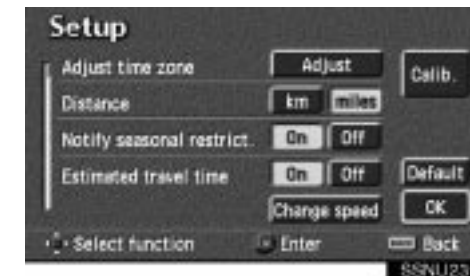



3. Select the **"Adjust"** switch. The **"Adjust time zone"** screen appears on the display.

## Adjust Time Zone



### 4. Select your desired time zone.

Selected switch is highlighted in green.

**Daylight saving time:** Select the "On" switch on the screen and then select  or  to set the day light saving time.


### 5. Select the "OK" switch on the screen and the "Setup" screen will be displayed.

## Distance

### 1. Push the "MENU" button on the navigation controller.



### 2. Select the "Setup" switch on the screen.

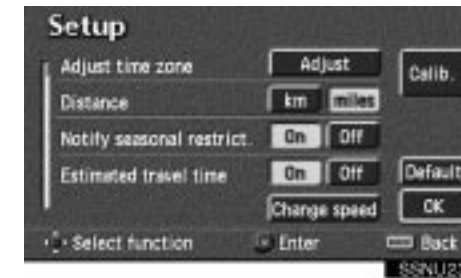


### 3. Choose the "km" or "miles" switch of "Distance" to select your desired units.

Selected switch is highlighted in green.

### 4. Select the "OK" switch.

## Notify Seasonal Restrict


1. Push the "MENU" button on the navigation controller.

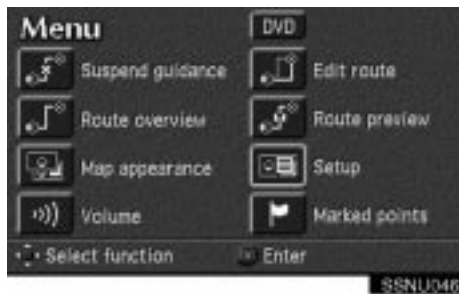

2. Select the "Setup" switch on the screen.




3. Select the "On" switch of "Notify seasonal restrict" and select the "OK" switch.

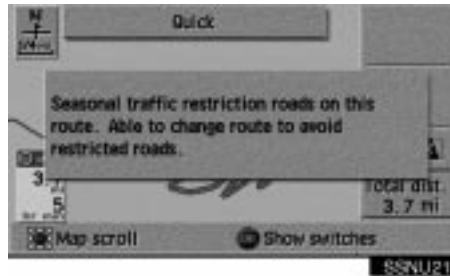


The restricted road icon and the message may appear on the screen.

## Voice Guide in All Modes

1. Push the "MENU" button on the navigation controller.

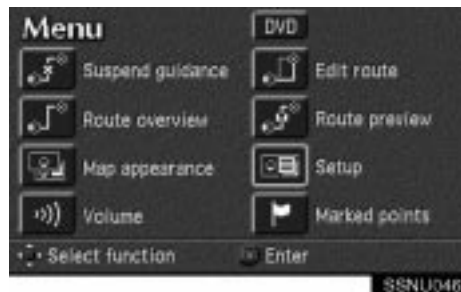

2. Select the "Setup" switch on the screen.

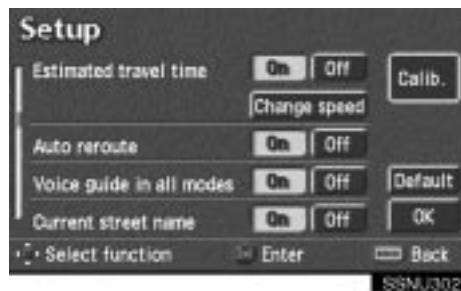


3. Select the "On" switch of "Voice guide in all modes" and select the "OK" switch.

## Current Street Name

1. Push the "MENU" button on the navigation controller.



2. Select the "Setup" switch on the screen.

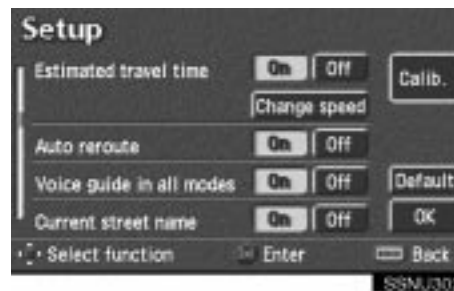


3. Select the "On" switch of "Current street name" and select the "OK" switch.



The current street name appears on the map screen.



## Maintenance Information

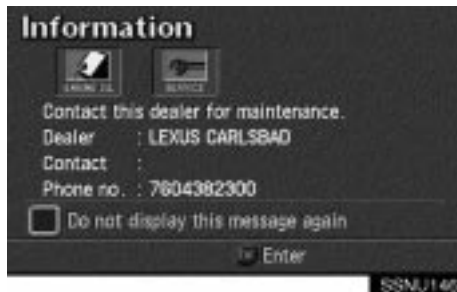

This system has a function which informs you of the time to replace certain parts or components as well as other information shown on the screen. (See "Information Items" on page 96.) When the system begins operating after reaching either the information item's date or driving distance, the "Information" screen will be displayed.

The "Information" screen will not be displayed or start up by selecting the **"Do not display this message again"** switch.



1. Push the "INFO" button on the navigation controller to display the information menu screen. Select the **"Maintenance"** switch to display the "Maintenance" screen.



2. Select your desired icon and input the conditions.



**"Date" of notice:** Input the next maintenance date.

**"Distance" of notice:** Input the driving distance until the next maintenance check.

When you select the **!** switch on the "Maintenance" screen, the screen changes to display the change name screen. Select the keys to input your desired name and then input the conditions.

## III

## Maintenance Information

After you input that information, select the "OK" switch. The screen then returns to the "Maintenance" screen. The icon's color will change to green after the date or driving distance is inputted. The icon's color will change to orange when your Lexus needs to be serviced. The following switches appear on the screen.

"Delete all": Cancel all conditions which have been inputted.

"Reset all": Reset an item which has satisfied a condition.

Select the "Off" switch at the top of the "Maintenance" screen, and the information screen will no longer be displayed.

### INFORMATION

- *For scheduled maintenance information, please refer to the "Owner's Manual Supplement / Scheduled Maintenance".*
- *Depending on your driving or the road conditions, the system may have a time-lag between the data which has been inputted and the actual date and driving distance.*

### Information items



Scheduled maintenance



Oil change



Replace oil filter



Rotate tires



Replace tires



Replace battery



Replace brake lining



Replace wiper blades



Replace engine coolant



Replace brake fluid



Replace ATF



Replace air filter



Personal

## Dealer Setting

### (a) Register dealer


You can register your dealer name and address.



1. Select the "Set dealer" switch on the "Maintenance" screen.



2. Enter your dealer's location address in the same way as you input any destination. (See page 5.)

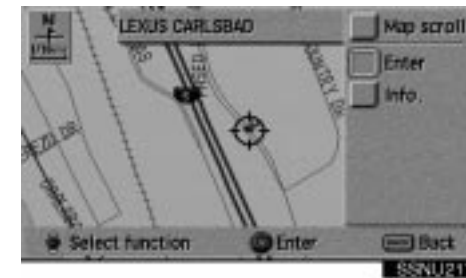

After you enter your dealer, the screen changes and displays the map location of the dealer. If it is OK, select the "Enter" switch at the right of the screen.

The current screen changes to the screen when you can edit the data of your dealer. (See (b) Edit dealer.)

III

## Dealer Setting

### (b) Edit dealer



You can edit your dealer's name, staff, location and phone number if you already registered the dealer.

1. Select the **"Set dealer"** switch on the **"Maintenance"** screen. The **"Edit dealer"** screen appears on the display.



2. Select the **"Change"** switch to edit the item.

### • Editing a "Dealer" or a "Contact"





Select alphabet, numeral or umlaut keys directly to input the name.


After you finish your entry, select the **"OK"** switch at the bottom right of the screen. The previous screen will be displayed.

## Dealer Setting

- Editing a "Location"

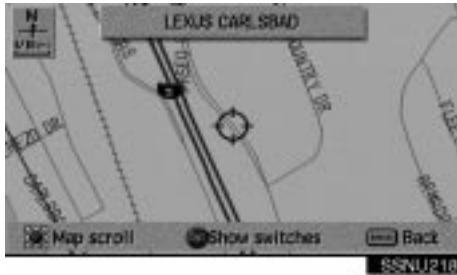

1. Move the cursor  to the desired point, and if you want to register that point, push the "ENT" button on the navigation controller.

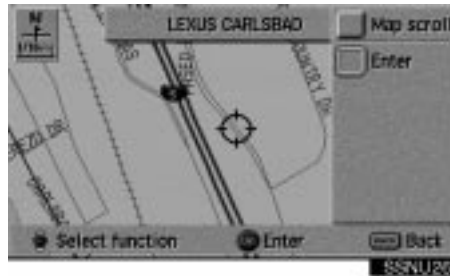

2. Select the "Enter" switch.

- Editing a "Phone No. (telephone number)"



Select numeral keys.

After you finish your entry, select the "OK" switch at the bottom right of the screen. The previous screen will be displayed.

III

## Dealer Setting

### (c) Delete dealer



1. Select the "Delete dealer" switch on the screen.
2. A selected point will appear. Also, a message will appear on the bottom of the screen. To delete, select the "Yes" switch. To cancel deletion, select the "No" switch.

### (d) View map



Select the "View map" switch on "Edit dealer" screen. The screen changes and displays the map location of the registered dealer and the road preference. (See "Entering Destination" on page 27.)

## Calendar



This system has a function which informs you the memo you entered. When the system begins operating after reaching the memo's date, the "Information" screen will be displayed.

The "Information" screen will not be displayed again by selecting the **"Do not display this message again"** switch.

## Calendar



Push the "INFO" button on the navigation controller to display the information menu screen. Select the "Calendar" switch to display the "Calendar" screen.



Today's date is highlighted. If today's date is not displayed on the screen, select "Today" switch to display a calendar of this month.

## Inputting a Memo



1. Select the day you want to input a memo.
2. Select the "Memo" switch to display the "Memo" screen.



III

## Inputting a Memo



3. Select alphabet, umlaut keys directly to input a memo. You can input up to 24 letters.

After you input the memo, select the "OK" switch at the bottom right of the screen. The previous screen will be appeared.

You can input a memo until December 31, 2020.



The date you inputted is displayed as above illustration.



You can select your desired date and/or mark color. Select the "Chg. mark" switch on the "Memo" screen.



Select your desired date or mark color. If you want to default the date color you chose, select the "Cancel" switch on the screen "Change mark". After you select the date and/or mark color, select the "OK" switch to display the previous screen.



## Adding a Memo



When you want to add a memo, directly select the date you want to add the memo.

The "Memo" screen appears on the display. If selecting "Memo" switch, the memo input screen is displayed. (See page 101 for inputting a memo.)

You can input up to three memos a day.

## Deleting a Memo



Select the date you already inputted the memo. Displaying the memo you want to delete and then select the "Delete" switch on the "Memo" screen. A message appears on the display. To delete, select the "Yes" switch. If not, select the "No" switch.

## Editing a Memo



If you want to edit the memo, select the date. Selecting the "Edit" switch will display the memo edit screen. (See page 101 for the details.)



III

## Memo List



If you want to have a look of the memo you inputted, select the "List" switch to display the "Memo list".




In case of selecting the "Period" switch, you can display the memo list as long as you desired. Select number keys to input your desired search period. After inputting a search period of time, select the "OK" switch. The "Memo list" screen will be displayed.

You can input a search period from January 1, 2000 through December 31, 2020.

### INFORMATION

*Before changing to the "Memo list" screen, there is a case where "Search list" screen and "Period" screen will be displayed.*

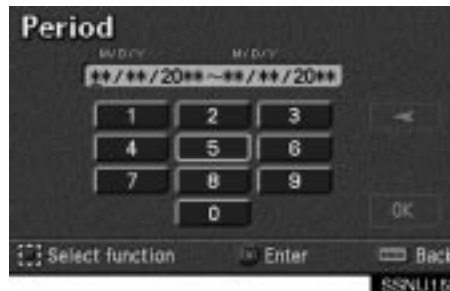

## Memo List

---



If you want to delete and/or edit the memo, select the ☐ switch of the memo.

If you want to delete all of the memo, select the "Del. all" switch. A message appears on the display. To delete, select the "Yes" switch. If not, select the "No" switch.

If you want to remove all of the colors of date you inputted, select the "Remove color" switch on the "Memo list" screen. A message appears on the display. To remove, select the "Yes" switch. If not, select the "No" switch.



**To edit:** Select the "Edit" switch. (See page 101 for details.)

**To delete:** Select the "Delete" switch. (See page 103 for details.)

